




WI-FI MAINTENANCE AND TROUBLESHOOTING

ACCESSING WI-FI SETTINGS MENU

The following instructions show how to enter the Wi-Fi Setting menu and change settings. The table below lists the settings and their detail. Default settings are shown in bold.


How to enter the Wi-Fi settings menu to change settings.

Press and hold  and  for three seconds. The screen will display the first setting.

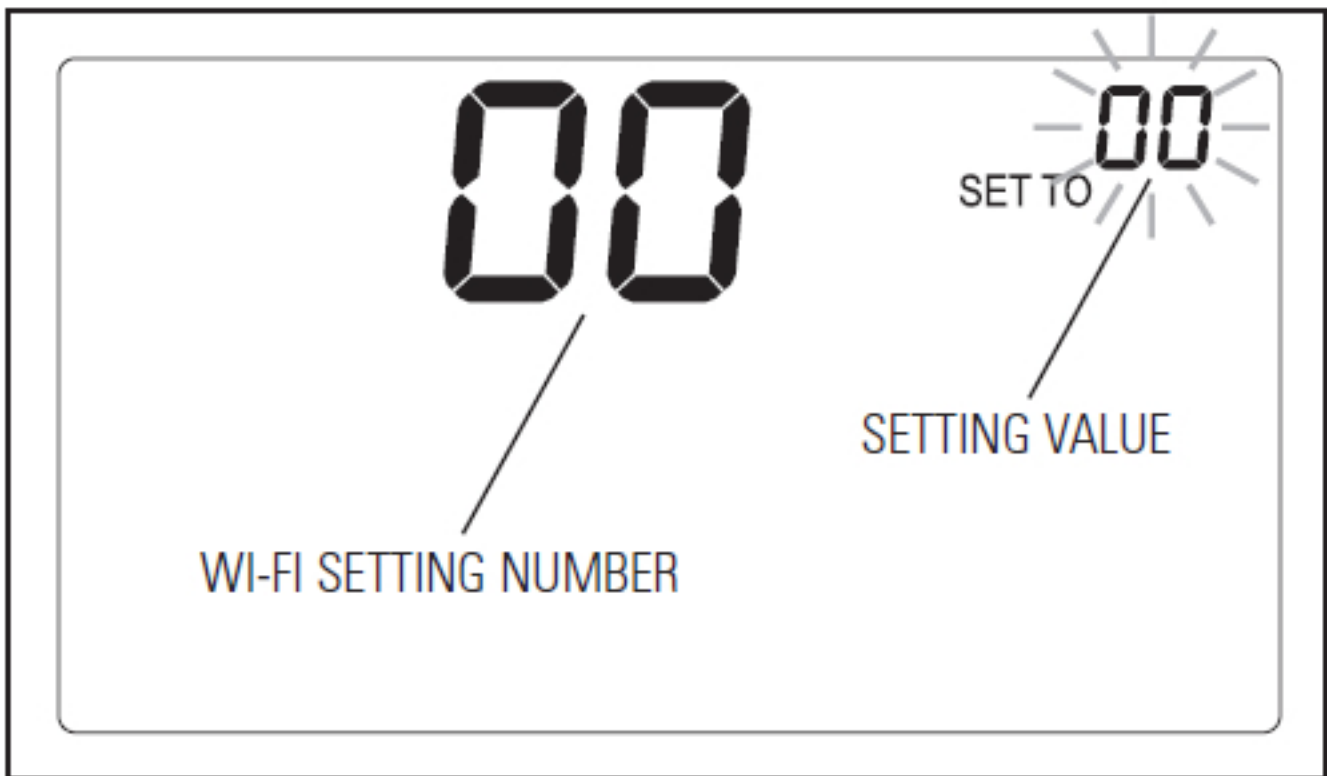

Press  or  to change the setting.

Press  to change to the next option.


Press  after the last setting. “DONE” will be displayed.

The thermostat will return to Normal mode if no button is pressed in 60 seconds.


ACCESSING WI-FI SETTINGS MENU

Wi-Fi setting	Description	Factory default setting (bold) and setting range
47. WiFi Disconnect and Clear Settings	Disconnects the Thermostat from the router and clears the Wi-Fi settings. Use this to set the thermostat back to provisioning mode so it can be connected to a new Wi-Fi router.	0: No 1: Yes
48. Turn WiFi Radio On/Off	Use to turn the Wi-Fi radio on or off. Wi-Fi settings will be maintained if the radio is set to Off.	0: Off 1: On
49. Unregister the Thermostat	Unregisters the thermostat from an Aprilaire account. Use this when the thermostat needs to be registered to a new Aprilaire account. For instance, if you have purchased a home with the thermostat already installed, this setting would allow you to clear the previous registration so that you can register the thermostat to your account.	0: No 1: Yes



CLEARING ROUTER SETTINGS

If you purchase a new Wi-Fi router or change the security settings on your existing router the router settings in the thermostat need to be cleared so the new Wi-Fi router settings can be entered. To do this, enter the Wi-Fi settings menu as described in the Accessing Wi-Fi Settings Menu section. Change the setting for WiFi Disconnect and Clear Settings to Yes then press  three times, “DONE” will be displayed. This will remove all of the previous Wi-Fi settings. Refer to the **Wi-Fi Quick Start Guide** for instructions on connecting to the thermostat to your Wi-Fi network.

REMOVING THE THERMOSTAT FROM A my.aprilaire.com ACCOUNT

The thermostat can only be registered to one **my.aprilaire.com** account. If you need to remove the thermostat from an existing account so it can be registered to a new account, it can be done at the thermostat. This may need to be done for instance if your have purchased a home with the thermostat and need to remove the thermostat from the previous owner’s account and register it to your account. To do this, enter the Wi-Fi settings menu as described in the Accessing Wi-Fi Settings Menu section on page 14. Change the setting for Unregister the Thermostat to Yes and then press  twice, “DONE” will be displayed. This will remove the thermostat from any account that it is currently registered to. Refer to the **Wi-Fi Quick Start Guide** for instructions on registering the thermostat to a new **my.aprilaire.com** account.

DISABLING THE WI-FI RADIO

To turn off the Wi-Fi radio on the thermostat, enter the Wi-Fi settings menu as described in the Accessing Wi-Fi Settings Menu section. Change the setting for Turn WiFi Radio On/Off to Off and then press , “DONE” will be displayed. This will turn off the Wi-Fi radio, but maintain all network settings. To turn the Wi-Fi radio back on simply enter the Wi-Fi setting menu and change the setting for Turn WiFi Radio On/Off to On and then press , “DONE” will be displayed.